



INSTRUCTIONS FOR:

MECHANIC'S UTILITY SEAT & TOOL BOX

MODEL No: **SCR18**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- WARNING!** *Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this seat.*
- Locate seat in a suitable working area.
- WARNING!** Use the seat on level and solid ground, preferably concrete.
- Keep the seat clean and tidy in accordance with good workshop practice.
- DO NOT** use the seat for any purpose other than that for which it is designed.
- DO NOT** stand on the seat.
- DO NOT** use the seat outdoors.
- DO NOT** get the seat wet or use in damp or wet locations or areas where there is condensation.
- DO NOT** clean the seat with any solvents which may damage the paint surface or the protective coating on the padded seat.
- DO NOT** exceed maximum capacity of 136kg.

2. INTRODUCTION

Mobile utility seat, tool box solution for keeping commonly used tools to hand. Features two folding side trays for storing nuts and bolts during use. Screwdriver storage rack on the rear. Four Ø60mm oil resistant swivel castors for easy manoeuvrability. Thick vinyl padded seat for added comfort. Suitable for the professional workshop.

3. SPECIFICATION

Model No: **SCR18**
 Maximum Capacity: 136kg
 Overall Size (W x D x H): 670 x 360 x 410mm

4. ASSEMBLY



- 4.1. Attach the two frames (fig.1.2) to the box (fig.1.1) using the provided screws.
- 4.2. Turn the seat (fig.1.3) padded side down and place the inverted frame and box assembly on top. Screw through the holes in the frame to secure.
- 4.3. Attach the castors (fig.1.4) to each side frame, using the internal hex. head bolt through the outer holes.
- 4.4. Fix the side frames to the frames using the eight bolts and dome headed nuts. The nuts should be uppermost to avoid fouling the castors.

5. MAINTENANCE

- 5.1. If in constant use, check the tightness of all the fixings regularly.
- 5.2. The castor wheels are maintenance free; ensure they are able to rotate and swivel freely.
- 5.3. Clean the seat cushion with a damp soapy cloth.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
 Kempson Way, Suffolk Business Park,
 Bury St. Edmunds, Suffolk,
 IP32 7AR

01284 757500

01284 703534



www.sealey.co.uk



sales@sealey.co.uk