

SEALEY

Garden & LEISURE

INSTRUCTIONS FOR: BACKPACK SPRAYER 16ltr Model No: SS4

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

NOTE! This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. The Sealey Hand Pressure Sprayer Model No SS4 is safe and only becomes a safety issue when used with toxic fluids. The following safety instructions are bulletin points and cannot cover every aspect of user safety.


- ✓ Be aware of the safety requirements (C.O.S.H.H.) for the fluids contained in the vessel.
- ✓ Wear safety equipment as advised in (C.O.S.H.H.) statements.
- ✓ Be aware the vessel will weigh in excess of 16kg (34lbs) when filled.
- ✓ Do read and follow all the fluid manufacturers instructions for application and safe use.
- ✓ Store the vessel inside an outbuilding away from foodstuffs and out of reach of children.
- ✓ Label vessel with chemical used, even if water. It is highly recommended that individual vessels should be used for individual chemicals. Cross contamination can give unexpected results. Also possible spillages are avoided in transferring liquids.
- X **DO NOT** spray at people, animals, protected insect species, in high winds, at naked flames or sources of heat.
- X **DO NOT** use the pressure sprayer for any purpose other than for which it is designed.
- X **DO NOT** use whilst eating, drinking, smoking; under the influence of drugs, alcohol, intoxicating medication, or if fatigued.
- X **DO NOT** use to spray flammable liquids, solvents etc..

2. INTRODUCTION

Designed for extensive use around the garden, greenhouse and vegetable plots. Suitable for use with most garden chemicals including herbicides, insecticides, fungicides and solvent free preservative treatments. Features an oscillating lever pump, large filler cap with pressure relief valve. A 350mm long metal lance fitted with an adjustable nozzle to switch between mist and jet settings, lockable trigger, plastic grip handle and 1100mm of plastic hose. Shoulder and waist straps enable easy carriage and can fitted to suit right or left handed use. The vessel is manufactured from heavy duty polypropylene with a capacity of 16ltr (27 pints).

3. OPERATION

- 3.1 Decide whether right hand or left hand pump lever requirement, then fit shoulder and waist straps. Trial fit and adjust straps.
- 3.2 Rotate filler cap (B) to remove.
- 3.3 Avoiding spillages, fill to 16L maximum or required volume.
- 3.4 Re-attach filler cap until hand tight against the neck seal.
- 3.5 Attach a label with contents indicated.
- 3.6 Pressurise by oscillating lever (A) shown in the held position. To unclip, pull away from vessel. The lever arm is capable of a 90° sweep from the vertical. The operator does not need to full sweep to pressurise.
- 3.7 Release clip (E) to operate the trigger (C), rotate the nozzle (D) to obtain desired spray mode. Re-clip to hold trigger open.
- 3.8 After use, operate manual pressure relief valve to depressurise the vessel.
- 3.9 Flush externally with water to clean off residuals and store safely after use.

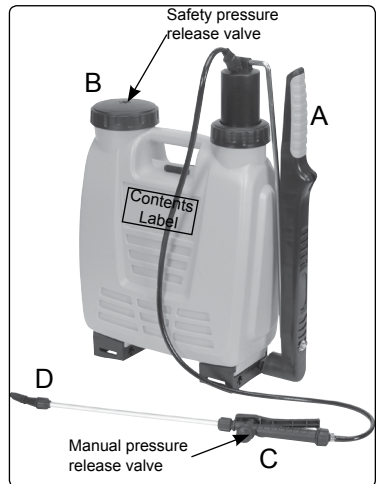

Environmental Protection. Recycle unwanted packaging materials or dispose of in a manner which is compatible with the environment. When the product is no longer required, dispose of in an environmentally protective way.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY Garden & LEISURE

Sole UK Distributor, Sealey Group,
Kempton Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

☎ 01284 757500

☎ 01284 703534

🌐 www.sealey.co.uk

✉ sales@sealey.co.uk