

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.**

## 1. SAFETY INSTRUCTIONS


### 1.1. PERSONAL PRECAUTIONS

- ✓ When using this meter, please observe all normal safety rules concerning:
  - Protection against the dangers of electric current.
  - Protection of the meter against misuse.
- ✓ Full compliance with safety standards can only be guaranteed if used with the test leads supplied. If necessary, they must be replaced with genuine Sealey leads with the same electronic ratings. Failure to do so will invalidate the warranty.
- ✗ **DO NOT** use leads if damaged or if the wire is bared in any way.

### 1.2. GENERAL SAFETY INSTRUCTIONS

- ✓ Familiarise yourself with the applications, limitations and hazards of the meter. *IF IN ANY DOUBT CONSULT A QUALIFIED ELECTRICIAN.*
- ✓ When the meter is linked to a measurement circuit, do not touch unused meter terminals.
- ✓ When the scale of the value to be measured is unknown set the selector to the highest range available.
- ✓ Before rotating the rotary switch to change functions, disconnect test leads from the circuit under test.
- ☐ **WARNING! Never perform resistance measurements on live circuits.**
- ✓ Always be careful when working with voltages above 60Vdc or 30Vac rms. Keep your fingers behind the probe guards while measuring.
- ✓ When not in use, store the meter carefully in a safe, dry, childproof location. Storage temperature range -10°C to 50°C.
- ✓ Never apply voltage or current to the meter that exceeds the specified maximum.

| Input Limits   |  |
|--|--|
| Function   | Maximum Input                            |
| V AC or V DC   | 600V AC, 600V DC                         |
| mA AC/DC   | 400mA AC/DC                              |
| A AC/DC  | 10A AC/DC (30 secs max every 15 minutes) |
| Frequency<br>Resistance<br>Capacitance<br>Duty Cycle<br>Diode Test<br>Continuity<br>Temperature<br>RPM<br>DWELL<br>Pulse Width | 250V AC/DC                               |

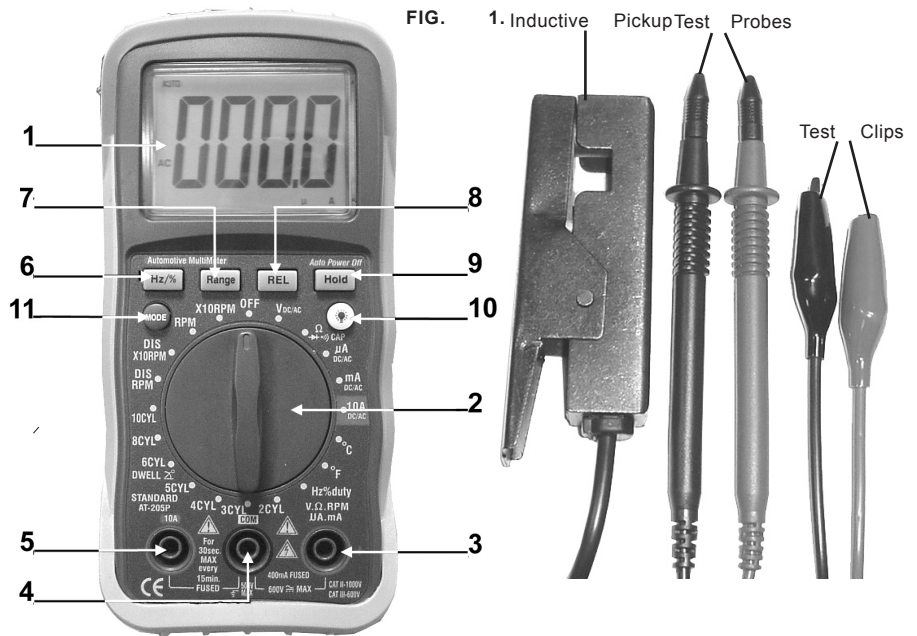

## 2. FEATURES

Compact size meter with four-digit 22mm, high contrast LCD display and backlight. Features auto-ranging, data hold and auto-power-off functions. Includes inductive coupler for fast reading of engine RPM. Supplied with probe, crocodile clips and thermocouple leads for easy hook up.

| Symbols & Description |                           |
|-----------------------|---------------------------|
|                       | Continuity                |
|                       | Low Battery               |
|                       | Diode                     |
|                       | Data Hold                 |
|                       | Auto Ranging              |
|                       | Alternating Current       |
|                       | Direct Current or Voltage |

| Layout: (Refer to fig. 1.) |   |
|----------------------------|---|
| 1.                         | Large LCD display with symbolic signs.  |
| 2.                         | Rotary switch.  |
| 3.                         | Positive (+) input jack for AC/DC Voltage, AC/DC $\mu$ A/mA current, Hz/%Duty Cycle, Ohms, Diode, Continuity, Capacitance, Temperature, (°C or °F) measurements, RPM and Dwell. |
| 4.                         | COM, negative input jack.   |
| 5.                         | 10A (positive) input jack for 10A AC or DC measurements.  |
| 6.                         | Frequency/Duty Cycle button.  |
| 7.                         | Range push button.  |
| 8.                         | Relative push button.   |
| 9.                         | Data hold.  |
| 10.                        | Backlight button.   |
| 11.                        | Mode push button.   |

### 3. SPECIFICATION

#### DC Voltage (Auto Ranging)

| Range   | Resolution | Accuracy                     |
|---------|------------|------------------------------|
| 400.0mV | 0.1mV      | ± 0.5% of reading ± 2 digits |
| 4.000V  | 1mV        | ± 1.5% of reading ± 2 digits |
| 40.00V  | 10mV       |                              |
| 400.0V  | 100mV      |                              |
| 1000V   | 1V         | ± 1.8% of reading ± 2 digits |

Input Impedance: 10MΩ.

Maximum Input 600Vac rms or 600Vdc.

#### AC Voltage (Auto Ranging except 400mV)

| Range   | Resolution | Accuracy                     |
|---------|------------|------------------------------|
| 400.0mV | 0.1mV      | ± 1.5% of reading ± 30 dig   |
| 4.000V  | 1mV        | ± 1.0% of reading ± 3 digits |
| 40.00V  | 10mV       | ± 1.5% of reading ± 3 digits |
| 400.0V  | 100mV      |                              |
| 600V    | 1V         | ± 2.0% of reading ± 2 digits |

Input Impedance: 10MΩ.

Frequency Range: 50 to 400Hz.

Maximum Input: 600Vac rms or 600Vdc .

#### Capacitance (Auto Ranging)

| Range   | Resolution | Accuracy                     |
|---------|------------|------------------------------|
| 40.00nF | 10pF       | ± 5.0% of reading ± 7 digits |
| 400.0nF | 0.1nF      | ± 3.0% of reading ± 5 digits |
| 4.000uF | 1nF        |                              |
| 40.00uF | 10nF       |                              |
| 100.0uF | 0.1uF      | ± 5.0% of reading ± 5 digits |

Input Protection: 250Vac rms or 250Vdc.

#### Resistance (Auto Ranging)

| Range   | Resolution | Accuracy                     |
|---------|------------|------------------------------|
| 400.0Ω  | 0.1Ω       | ± 1.2% of reading ± 4 digits |
| 4.000kΩ | 1Ω         | ± 1.0% of reading ± 2 digits |
| 40.00kΩ | 10Ω        | ± 1.2% of reading ± 2 digits |
| 400.0kΩ | 100Ω       |                              |
| 4.000MΩ | 1kΩ        | ± 2.0% of reading ± 3 digits |
| 40.00MΩ | 10kΩ       |                              |

Input Protection: 250Vac rms or 250Vdc.

#### Diode test

| Range         | Resolution | Accuracy                    |
|---------------|------------|-----------------------------|
| 0.3mA typical | 1mV        | ± 10% of reading ± 5 digits |

Open Circuit Voltage: 1.5Vdc typical

Overload Protection: 250Vac rms or dc.

#### Temperature

| Range        | Resolution | Accuracy   |
|--------------|------------|--|
| -20°C~+760°C | 1°C        | ± 3.0% of reading ± 3 digits<br>(Meter only, probe accuracy not included). |
| -4°F~+1400°F | 1°F        |  |

Sensor: Type K Thermocouple

#### RPM (Tacho)

| Range | Resolution                | Accuracy                  |
|-------|---------------------------|---------------------------|
| RPM 4 | 600~4000RPM               | 1RPM                      |
|       | 600~1200RPM<br>(X 10 RPM) | 10RPM                     |
|       |                           | ±2% of reading ± 4 digits |
| RPM 2 | 300~4000RPM               | 1RPM                      |
| /DIS  | 300~600RPM<br>(x 10 RPM)  | 10RPM                     |

Effect Reading: >600RPM

Overload protection 250V ac rms or dc.

Overvoltage Category: CAT111 600V.  
 Display: 4000 counts LCD display with function indication.  
 Polarity: Automatic, (-) negative polarity indication.  
 Overrange: "OL" mark indication.  
 Low Battery Indication: The "BAT" is displayed when the battery voltage drops below the operating level.  
 Measurement Rate: 2 times per second nominal  
 Auto Power Off: Meter automatically shuts down after approx 30 minutes of inactivity.  
 Operating environment: 0°C to 50°C (32° to 122°F) at < 70%relative humidity.  
 Storage Temperature: -20° to 60°C (-4°F to 140°F) at <80% relative humidity.  
 For Inside Use:  
 Max Working Height: 2000mtr.  
 Power: One 9V battery PP3.  
 Dimensions: 146 (H) x 66.2 (W) x41.5 (D) mm  
 Approx Weight: 330g

Accuracy is given at 18°C to 28°C (65°F to 83°F) less than 70% relative humidity.

Original Language Version

#### Duty Cycle (Auto Ranging)

| Range      | Resolution | Accuracy                     |
|------------|------------|------------------------------|
| 0.1%~99.9% | 0.1%       | ± 1.2% of reading ± 2 digits |

Pulse Width: >100us, <100ms

Frequency Width: 5Hz - 150kHz

Overload Protection: 250Vac rms or dc.

#### Dwell Angle

| Cylinder | Range    | Resolution | Accuracy                     |
|----------|----------|------------|------------------------------|
| 2CYL     | 0~180.0° | 0.1°       | ± 2.0% of reading ± 4 digits |
| 3CYL     | 0~120.0° |            |                              |
| 4CYL     | 0~90.0°  |            |                              |
| 5CYL     | 0~72.0°  |            |                              |
| 6CYL     | 0~60.0°  |            |                              |
| 8CYL     | 0~45.0°  |            |                              |
| 10CYL    | 0~36.0°  |            |                              |

Overload Protection: 250Vac rms or dc.

#### Frequency (Auto Ranging)

| Range  | Resolution | Accuracy                     |
|--------|------------|------------------------------|
| 5Hz    | 0.001Hz    | ± 1.5% of reading ± 5 digits |
| 50Hz   | 0.01Hz     |                              |
| 500Hz  | 0.1Hz      |                              |
| 5kHz   | 1Hz        | ± 1.2% of reading ± 3 digits |
| 50kHz  | 10Hz       |                              |
| 500kHz | 100Hz      |                              |
| 10MHz  | 1kHz       | ± 1.5% of reading ± 4 digits |

Sensitivity: <0.5V rms while <1MHz

Sensitivity: >3V rms while >1MHz

Overload Protection: 250Vac rms or dc.

#### DC Current (Auto Ranging for uA and mA)

| Range   | Resolution | Accuracy                     |
|---------|------------|------------------------------|
| 400.0uA | 0.1uA      | ± 1.0% of reading ± 3 digits |
| 4000uA  | 1uA        | ± 1.5% of reading ± 3 digits |
| 40.00mA | 10uA       |                              |
| 400.0mA | 100uA      |                              |
| 4A      | 1mA        | ± 2.5% of reading ± 5 digits |
| 10A     | 10mA       |                              |

Overload Protection: 0.5A/250V and 20A/250V

Fuse:

Maximum Input:400mAac rms or 400mAdc on uA/mA ranges

20A ac or dc rms on 10A range.

#### AC Current (Auto Ranging for uA and mA)

| Range   | Resolution | Accuracy                     |
|---------|------------|------------------------------|
| 400.0uA | 0.1uA      | ± 1.5% of reading ± 5 digits |
| 4000uA  | 1uA        | ± 1.8% of reading ± 5 digits |
| 40.00mA | 10uA       |                              |
| 400.0mA | 100uA      |                              |
| 4A      | 1mA        | ± 3.0% of reading ± 7 digits |
| 10A     | 10mA       |                              |

Overload Protection: 0.5A/250V and 20A/250V

Fuse:

Frequency Range:50 to 400Hz

Maximum Input: 40mAac or 400mAdc rms on uA/mA ranges,

20Aac rms or dc on 20A range.

#### Audible Continuity

|                    |                |
|--------------------|----------------|
| Audible threshold: | Less than 150Ω |
| Test Current:      | <0.3mA         |

Overload Protection: 250Vac rms or dc.

## 4. OPERATION

- **WARNING!** Ensure that you read, understand and apply the safety and operational instructions before connecting the meter. Only when you are sure that you understand the procedures is it safe to proceed with testing.
- **WARNING!** Risk of electrocution. High voltage circuits both AC and DC are very dangerous and should be measured with great care. Operating temperature range 0°C to 40°C.  
**Remember** to turn on meter before use and to turn it off when measurement is completed.
- Note:** IF "OL" appears in the display during a measurement, the value exceeds the range you have selected. Change to a higher rating.
- Note:** On some low AC and DC ranges, with the test leads not connected to a device, the reading may show a random fluctuating reading. This is normal and is caused by the high input sensitivity. The reading will stabilise and give a proper measurement when connected to a circuit.
- 4.1. Mode Button** (fig.1.11)
  - 4.1.1. To select AC/DC voltages, AC/DC current, Resistance, Diode, Continuity and Capacitance check.
- 4.2. Range Button** (fig.1.7.)
  - Note:** When the meter is first turned on, it automatically selects the best range for the measurements being made and is generally the best setting for most measurements. For measurements situations requiring that a range be manually selected, perform the following.
  - 4.2.1. Press the Range button. The "AUTO" display indicator will turn off.
  - 4.2.2. Press the range button to step through the available ranges until you select the range you want.
  - 4.2.3. Press the range button for two seconds to exit the manual ranging mode and return to auto ranging.
- 4.3. Data Hold, Backlight Button** (fig.1.9. & fig.1.10.)
  - 4.3.1. The data hold function allows the meter to freeze a measurement for later reference.
  - 4.3.2. Press the data hold button to freeze the reading in the display. The indicator "hold" will appear in the display.
  - 4.3.3. Press the data hold button to return to normal operation.
  - 4.3.4. Press and hold the backlight button to switch on the display backlight.
  - 4.3.5. The backlight will automatically turn off after approx 10 seconds.
- 4.4. Relative Button** (fig.1.8.)
  - 4.4.1. The relative measurement feature allows you to make measurements relative to a stored reference value. A reference voltage, current etc can be stored and measurements made in comparison to that value. The displayed value is the difference between the reference value and the measured value.
  - 4.4.2. Perform any measurement as described in the operating instructions.
  - 4.4.3. Press the relative button to store the reading in the display and the "REL" indicator will appear in the display.
  - 4.4.4. The display will now indicate the difference between the stored value and the measured value.
  - 4.4.5. Press the relative button to return to normal operation.
- 4.5. Hz/% Duty Button** (fig.1.6.)
  - 4.5.1. Press the Hz/% duty button to choose frequency or Duty Cycle in the range of frequency when measuring voltage or current.
  - 4.5.2. Press the Hz/% duty button to return to measurement of voltage or current.
- 4.6. AC or DC Voltage Measurements**
  - 4.6.1. Insert the black test lead into the negative "COM" jack and the red test lead into the positive "V" jack.
  - 4.6.2. Turn the rotary switch to the VDC/AC position.
  - 4.6.3. Press the "MODE" button to select ac or dc voltage.
  - 4.6.4. Touch the test probes to the circuit under test and read the voltage display.
- Note:** Pressing the Hz button (fig1.6.) while in the voltage function will switch the display to frequency or duty cycle.
- 4.7. AC or DC Current Measurements**
  - **WARNING! Do Not make current measurements on the 10A scale for longer than 30 seconds in every 15 minutes. Exceeding 30 seconds may cause damage to the meter and test leads**
  - 4.7.1. Insert the black test lead into the into the negative "COM" jack and the red test lead into the:
    - a) **Positive uA/mA jack** for currents to 400mA (fig.1.3.)
    - b) **Positive 10A jack** for currents to 20A (fig.1.5.)
  - 4.7.2. Turn the rotary switch to the uA, mA or A position.
  - 4.7.3. Press the mode button to select AC or DC current.
  - 4.7.4. Touch the test probes in series with the circuit under test and read the current on the display.
- 4.8. Resistance, Diode, Continuity or Capacitance Measurements**
  - **WARNING! To avoid electric shock, disconnect power to unit under test and discharge all capacitors before taking any resistance or capacitance measurements.**
  - 4.8.1. Insert the black test lead into the negative "COM" jack and the red test lead into the positive  $\Omega$   $\rightarrow$   $\rightarrow$  CAP jack.
  - 4.8.2. Turn the rotary switch to the  $\Omega$   $\rightarrow$   $\rightarrow$  CAP position.
  - 4.8.3. Press the Mode button (fig. 1.11.) to select  $\Omega$  or  $\rightarrow$  or  $\rightarrow$  or CAP.
  - 4.8.4. Connect the test probes to the two ends of the Resistance, Diode, Continuity, Capacitance or circuit to be measured.
  - 4.8.5. Read the measured value from the display.
  - 4.8.6. When on continuity range a beeping will be heard if the resistance is lower than 150 $\Omega$ .
  - 4.8.7. When measuring the forward voltage across a good diode 0.4V or 0.7V will be indicated and the reverse voltage will indicate "OL" (same as on open condition). For a short circuit diode, a value of 0mV will be displayed.
- **WARNING! When checking in-circuit capacitance, be sure to disconnect the power supply from the circuit and that the capacitors are fully discharged. The range control mode in capacitance measurement is auto-ranging.**
- 4.9. Frequency or Duty Cycle measurements**
  - 4.9.1. Insert the black test lead into the negative "COM" jack and the red test lead into the positive "Hz" jack.
  - 4.9.2. Turn the rotary switch to the "Hz %DUTY" position.
  - 4.9.3. Press the Hz % button (fig.1.6.) to select Hz or %.
  - 4.9.4. Touch the test probes to the circuit under test and read the frequency or duty cycle on the display.
- 4.10. Temperature Measurements**
  - 4.10.1. Insert the type K thermocouple plug into the negative "COM" jack and the positive jack ensuring the + symbol on the plug is inserted into the positive + jack and the negative symbol on the plug is inserted into the negative "COM" jack.
  - 4.10.2. Turn the rotary switch to the select °C or °F.
  - 4.10.3. Read the temperature on the display.
- 4.11. RPM (TACHO) Measurements**
  - **WARNING! To avoid electric shock, ensure the vehicles high tension leads are in good condition and switch off ignition before connecting, disconnecting or relocating the inductive pickup.**
  - 4.11.1. Select the RPM or DIS RPM range with the rotary switch.
  - 4.11.2. Select the X10 RPM or DIS X10 RPM range with the rotary switch. Multiply the displayed reading times by 10 to get the actual RPM.
  - 4.11.3. Insert the inductive pickup leads into the meter. Black lead into the negative "COM" jack and the red lead into the positive RPM jack (fig.1.3.).
  - 4.11.4. Connect the inductive pickup to a spark plug HT lead. If no reading is received, unhook the clamp, turn it over and connect again.
- Note:** Connect the pickup as far away from the distributor and exhaust manifold as possible.
- Position the pickup to within six inches of the spark plug or move it to another plug HT lead if no reading or an erratic reading is obtained.
- Note:** RPM: For RPM of 4-stroke engines which have 1 ignition on every 4 engine strokes.  
DIS RPM2: For RPM of DIS (Distributor-less Ignition System) and 2-stroke engines which have 1 ignition on every two strokes.

#### 4.12. Dwell Angle Measurement

Dwell angle is the number of degrees through which the distributor cam rotates while the breaker points are closed.

- 4.12.1. Insert the black test lead into the negative "COM" jack and the red test lead into the positive + jack.
- 4.12.2. Turn the rotary switch to the corresponding position of 2CYL, 3CYL, 4CYL, 5CYL, 6CYL, 8CYL OR 10CYL on the dwell range.
- 4.12.3. Connect the black test lead to the Ground terminal (-) on the car battery and the red test lead to the contact breaker points or the negative (-) terminal of the ignition coil.
- 4.12.4. When the engine is started the Dwell will be displayed.

**Note:** To reduce the dwell angle reading the points gap must be increased, to increase the dwell angle the points gap must be reduced. Refer to your owners handbook for detailed procedures for dwell settings and adjustments.

#### 4.13. Other Functions

- 4.13.1. Your meter is also capable of testing the following automotive sensors.
  - Oxygen Sensors
  - Fuel Injectors
  - Temp Sensors
  - Position Sensors
  - absolute pressure (MAP) and Baro Sensors
  - Mass Air Flow (MAF) Sensors
- 4.13.2. For a detailed description and testing procedure for these sensors, please refer to the vehicles hand book.

#### 4.14. Replacing The Battery

- WARNING! To avoid electric shock, disconnect the test leads from any source of voltage before removing the battery door.**
- 4.14.1. When the battery become exhausted or drops below the operating voltage, "BAT" will be appear in the right hand side of the display. Replace the battery.
- 4.14.2. Disconnect the leads from the meter.
- 4.14.3. Gently pull away the protective plastic moulding cover to gain access to the rear of the meter.
- 4.14.4. Open the battery door by loosening the two screws using a Phillips head screw driver.
- 4.14.5. Remove the old battery and insert the new one, observing the correct polarity.
- 4.14.6. Replace the battery cover and secure with the two screws.
- WARNING! To avoid electric shock, DO NOT operate the meter until the battery cover is secured in place.**

#### 4.15. Replacing The Fuses

- WARNING! To avoid electric shock, disconnect the test leads from any source of voltage before accessing the fuses.**
- 4.15.1. Disconnect the test leads from any item under test and disconnect them from the meter.
- 4.15.2. Gently pull away the protective plastic moulding cover to gain access to the rear of the meter.
- 4.15.3. Open the battery door by loosening the two screws using a Phillips head screw driver.
- 4.15.4. Remove the old fuse from its holder by gently pulling it out.
- 4.15.5. Install the new fuse into its holder.
- Note:** Always use a fuse of the correct size and value.
  - 0.5A/250V fast blow for the 400mA range.
  - 10A/250V fast blow for the 10A range.
- 4.15 .6. Replace the cover and secure with the two screws.
- WARNING! To avoid electric shock, DO NOT use the meter until it has been fully re-assembled.**

## 5. MAINTENANCE

- WARNING! DO NOT** attempt to repair or service your meter unless you are qualified to do so and have the relevant calibration, performance test, and service information. To avoid electrical shock or damage to the meter do not get water inside the case.
- 5.1. Periodically wipe the case with a damp cloth and mild detergent. Do not use solvents.
- 5.2. Turn the meter off when not in use and remove the battery if stored for a long period of time.
- 5.3. Do not store the meter in a place of high humidity or high temperature.

## 6. PARTS

| Item | Description       | Parts    |
|------|-------------------|----------|
| 1    | TEMPERATURE PROBE | TA201.01 |
| 2    | TEST LEADS        | TA201.02 |
| 3    | CROCODILE CLIPS   | TA201.03 |
| 4    | HOLSTER           | TA201.04 |

|            |        |
|------------|--------|
| ISSUE      | 1      |
| DATE ISSUE | 220404 |

### Environmental Protection.



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.



When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

**WARNING:** Do not dispose of by fire. This could result in an explosion.  
Before disposing of battery, cover exposed terminals with heavy duty electrical tape to prevent shorting.  
**DO NOT** expose battery to intense heat or fire as this could cause an explosion.

Battery Removal: See Section 4.14.

ONLY dispose of or recycle according to local authority regulations. Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk,  
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk