

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.




IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

1. SAFETY INSTRUCTIONS

1.1 GENERAL SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- ✓ Familiarise yourself with the application, limitations and hazards of the oil drainer.
- ✓ Maintain the drainer in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Keep the drainer clean for best and safest performance.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** use the drainer for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the drainer if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** stand on the drainer.
- ✗ **DO NOT** allow untrained persons to operate the drainer.
- ✗ **DO NOT** operate the drainer when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use, store in a safe, dry, childproof area.
- ✓ Dispose of waste oil in accordance with local authority regulations.
- WARNING!** DO NOT pollute the environment by allowing uncontrolled discharge of waste oil.

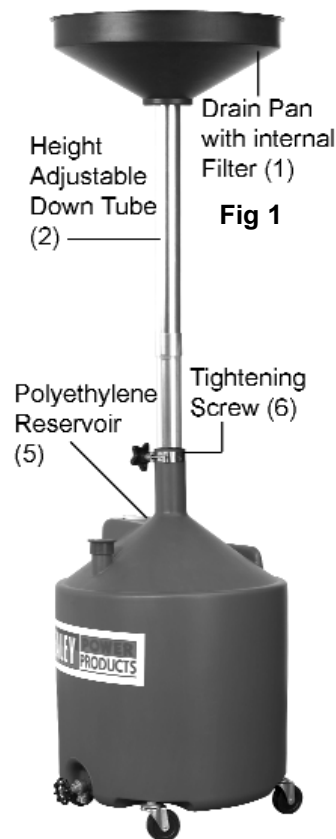

2. INTRODUCTION & SPECIFICATION

- 2.1. Polyethylene reservoir, 80ltr capacity, mounted on four castors for mobility. Drain pan, with filter, on height adjustable down tube. Gravity drain tap for manual emptying.

Capacity:80ltr Max. Height to Pan:1800mm
 Min. Height to Pan:940mm Gravity Feed:Yes

3. ASSEMBLY

3.1 ASSEMBLY

Note: Numbers in brackets refer to item numbers in Fig 1.

- 3.2. Connect drain pan (1) to the height adjustable down tube (2).
- 3.3. Insert down tube (2) into the polyethylene reservoir (5) and secure with tightening screw (6).

4. OPERATION

- 4.1. Place mobile oil drainer under the equipment to be drained. Raise the drain pan (1) beneath the equipment's drain valve or vent.
- 4.2. When draining is complete, lower the drain pan before removing the drainer.

EMPTYING OIL DRAINER

- 4.3. Disconnect the drain pan (1) and the down tube (2) from the reservoir (5).
 - 4.4. Using the gravity drain tap, dispose of the waste oil.
- WARNING! DO NOT** pollute the environment by allowing uncontrolled discharges of waste oil.
- IMPORTANT! Dispose of waste oil in accordance with local authority regulations.**

5. MAINTENANCE

- 5.1. Clean the drain pan filter as necessary.
- 5.2. Clean the inside of the reservoir at regular intervals.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.